

# K-Sounds Piano 1

## ES to XS Voice Upgrade

### Loading

Copy the included file "P1 ES to XS.X0V" and a pair of All Waveform files (.W7W and .W8W) from your original Piano 1 (Motif ES format) disc to your USB storage device or to a computer networked to the Motif XS. On the Motif XS, first load "P1 ES to XS.X0V" as an All Voice file. Then load the .W7W file you copied from the Piano 1 CD.

We recommend that you resave the sample data as a Motif XS format All Waveform file (.X0W). This will facilitate faster loading for subsequent uses.

You will find the new Motif XS-format voices in the first twenty memory locations of the USER 1 voice bank.

### Voice List

Voice Name	Comments	Controller Assignments
Dynamic Model D	Very dynamic. Somewhat enhanced sustain.	AF1 - Disable release model
Natural Stein	Warm. Natural decay.	AF1 - Disable release model
DynaMix SustEin	Dynamic. Restricted amplitude range. Enhanced Sustain.	AF1 - Disable release model
Studio Stein	Warm. Very restricted amplitude range. Enhanced Sustain.	AF1 - Disable release model
Up-Front Stein	Warm. Restricted amp range. Slightly enhanced sustain.	AF1 - Disable release model
Aggressive Stein	Clear and slightly metallic. Slightly enhanced sustain.	none
Stein for Rock	Dynamic piano with a bite. Slightly enhanced sustain.	AF1 - Disable release model
Dance Stein	Extremely bright synth piano.	none
Dark Stein	Keymap shifted for darker timbre. Slightly enhanced sustain.	AF1 - Disable release model
Intimate Stein	Very soft. Enhanced sustain. Ideal for sentimental music.	AF1 - Disable release model
Dreamy Stein AF1&2	Ethereal soundscape.	AF1 - Deeper modulation AF2 - Decrease reverb AT - Detune pad MW - Fade-out
Stein+Strings AF1, AT	Warm piano with smooth orchestral strings.	AF1 - Disable strings AT - Strings dynamic swell MW - Fade-out strings
Stein Concerto AF1&2	Dynamic piano with solo and/or ensemble strings.	AF1 - Enable chamber strings AF2 - Enable large strings
Stein Orchestra AFs	Piano + strings + horns. Additional layers on AF switches.	AF1 - Enable tpts and tbns AF2 - Left Hand BD and cym
Pad Stein AF1&2	Bright piano with pad layers on AF switches.	AF1 - Enable warm pad AF2 - Enable twinkles MW - Brighten pad
Stein & Rhodes AF1&2	Bright piano and Fender Rhodes.	AF1 - Stop EP Phaser AF2 - Remove EP tremolo
DX Ballad Stein AF1	Bright synth piano and DX7 Rhodes.	AF1 - EP chorus depth
DX Power Stein AF1&2	Bright synth piano and FM power layers.	AF1 - EP chorus depth AF2 - Add octave layer
Stein & B3 AF1&2	Four standard B3 timbres are possible via AF switches.	AF1 - 2nd and 4th drawbars AF2 - 9th drawbar MW - Rotary speaker speed Assign 2 knob - Rotary drive
Stein Bass Split AF1	Acoustic bass changes to electric bass with AF1.	AF1 - Change to electric bass AT - Acoustic Bass vibrato