

K-Sounds Piano 2

ES to XS Voice Upgrade

Loading

Copy the included file "P2 ES to XS.X0V" and a pair of All Waveform files (.W7W and .W8W) from your original Piano 2 (Motif ES format) disc to your USB storage device or to a computer networked to the Motif XS. On the Motif XS, first load "P2 ES to XS.X0V" as an All Voice file. Then load the .W7W file you copied from the Piano 2 CD.

We recommend that you resave the sample data as a Motif XS format All Waveform file (.X0W). This will facilitate faster loading for subsequent uses.

You will find the new Motif XS-format voices in the first twenty-one memory locations of the USER 1 voice bank.

Voice List

Voice Name	Comments	Controller Assignments
EX Concert Grand	Very dynamic. Somewhat enhanced sustain.	AF1 - Disable release model
Dynamic EX	Similar to EX Concert Grand, but soft notes are not as warm.	AF1 - Disable release model
DynaMix Sustain EX	Dynamic. Restricted amplitude range. Enhanced sustain.	AF1 - Disable release model
Studio EX	Restricted, non-linear amplitude response. Enhanced sust.	AF1 - Disable release model
Session EX	Warm. Medium dynamic range. Slightly enhanced sustain.	AF1 - Disable release model
Up-Front EX	Medium dynamic range. Mid-range boost for clarity.	AF1 - Disable release model
Bright EX	Low-end cut. "Bites" at hard velocities. Enhanced sustain.	AF1 - Disable release model
Bright&Compressed EX	Very compressed. "Bites" at hard velocities.	AF1 - Disable release model
Dance EX	Extremely bright synth piano.	none
Dark EX	Keymap shifted for darker timbre. Enhanced sustain.	AF1 - Disable release model
Intimate EX	Warm but clear. Restricted dynamic and amplitude range.	AF1 - Disable release model
Dreamy EX AF1&2	Ethereal soundscape.	AF1 - Deeper modulation AF2 - Decrease reverb AT - Detune pad MW - Fade-out
EX & Strings AF1, AT	Warm piano with smooth orchestral strings.	AF1 - Disable strings AT - Strings dynamic swell MW - Fade-out strings
Concerto EX AF1&2	Warm piano with solo and/or ensemble strings.	AF1 - Enable chamber strings AF2 - Enable large strings
Orchestra EX AF1&2	Piano + strings + horns. Additional layers on AF switches.	AF1 - Enable tpts and tbns AF2 - Left Hand BD and cym
EX Pad Layers AF1&2	Bright piano with pad layers on AF switches.	AF1 - Enable warm pad AF2 - Enable twinkles MW - Brighten pad
EX & Rhodes AF1&2	Dynamic piano and Fender Rhodes.	AF1 - Stop EP Phaser AF2 - Remove EP tremolo
DX & EX Ballad AF1	Bright synth piano and DX7 Rhodes.	AF1 - EP chorus depth
DX-EX Power AF1&2	Bright synth piano and FM power layers.	AF1 - EP chorus depth AF2 - Add octave layer
EX & B3 Organ AF1&2	Four standard B3 timbres are possible via AF switches.	AF1 - 2nd and 4th drawbars AF2 - 9th drawbar MW - Rotary speaker speed Assign 2 knob - Rotary drive
EX Bass Split AF1	Acoustic bass changes to electric bass with AF1.	AF1 - Change to electric bass AT - Acoustic Bass vibrato